



**CUTBACK  
MOTORCYCLES**

## BMW R 1300 GSA

### QUICK ASSEMBLY GUIDE | **PANNIER RACK**


#### **Tools Required**

- ☐ Ratchet + Extension
- ☐ 10mm Wrench
- ☐ 4mm Allen Socket
- ☐ T45 Torx Socket
- ☐ Blue Loctite (recommended)


Number	QTY	Specifications	Torque (NM)
<u>1</u>	4	OEM Top Rack Hardware	*
<u>2</u>	2	OEM Foot Peg Hardware	*
<u>3</u>	4	M6 x 20mm Allen Bolt	10
<u>4</u>	8	M6 Washers	-
<u>5</u>	4	M6 Nyloc Nuts	-

\* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.\*

**STEP 1:**

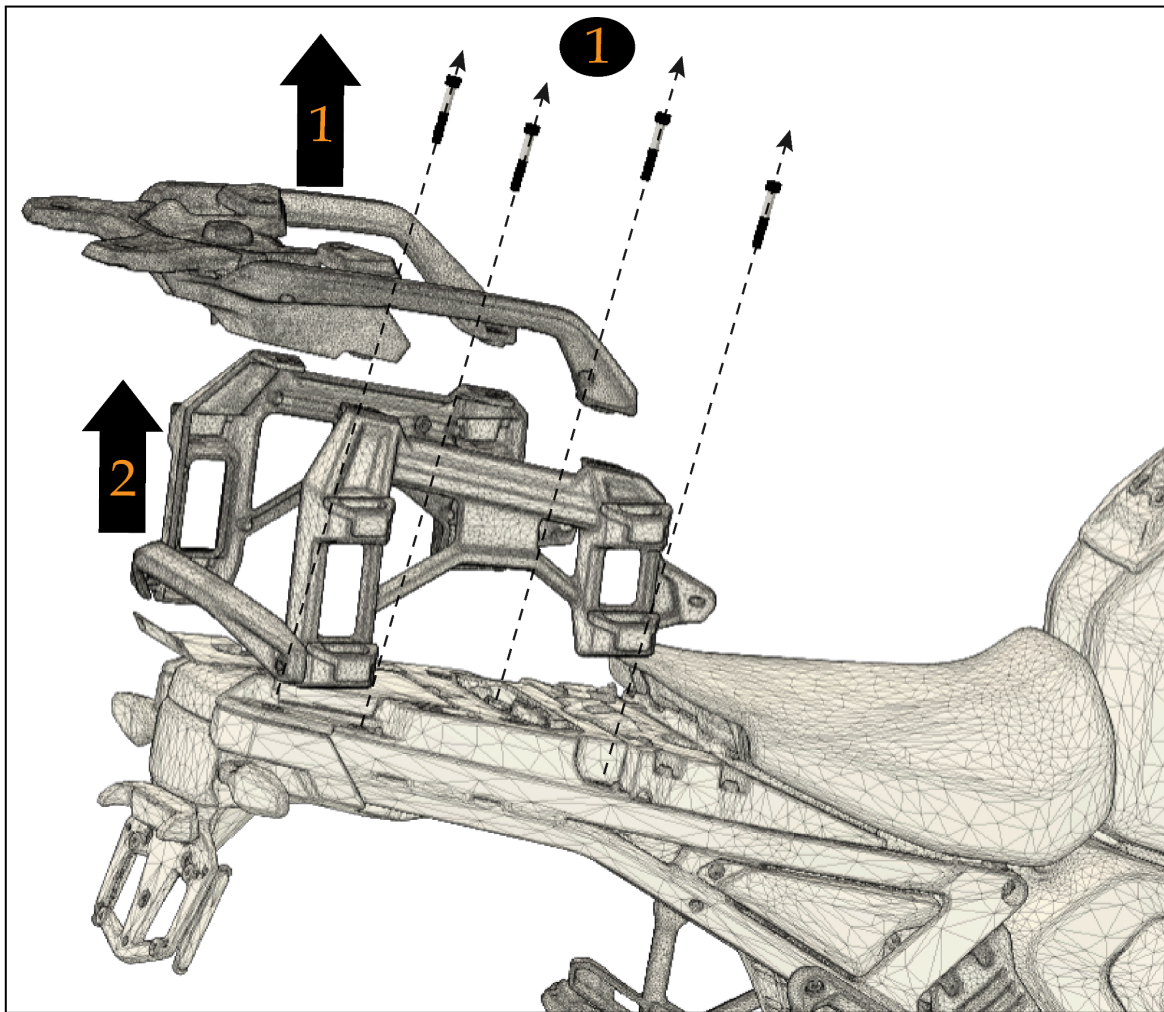


**STEP 2: (Identical Left + Right)**

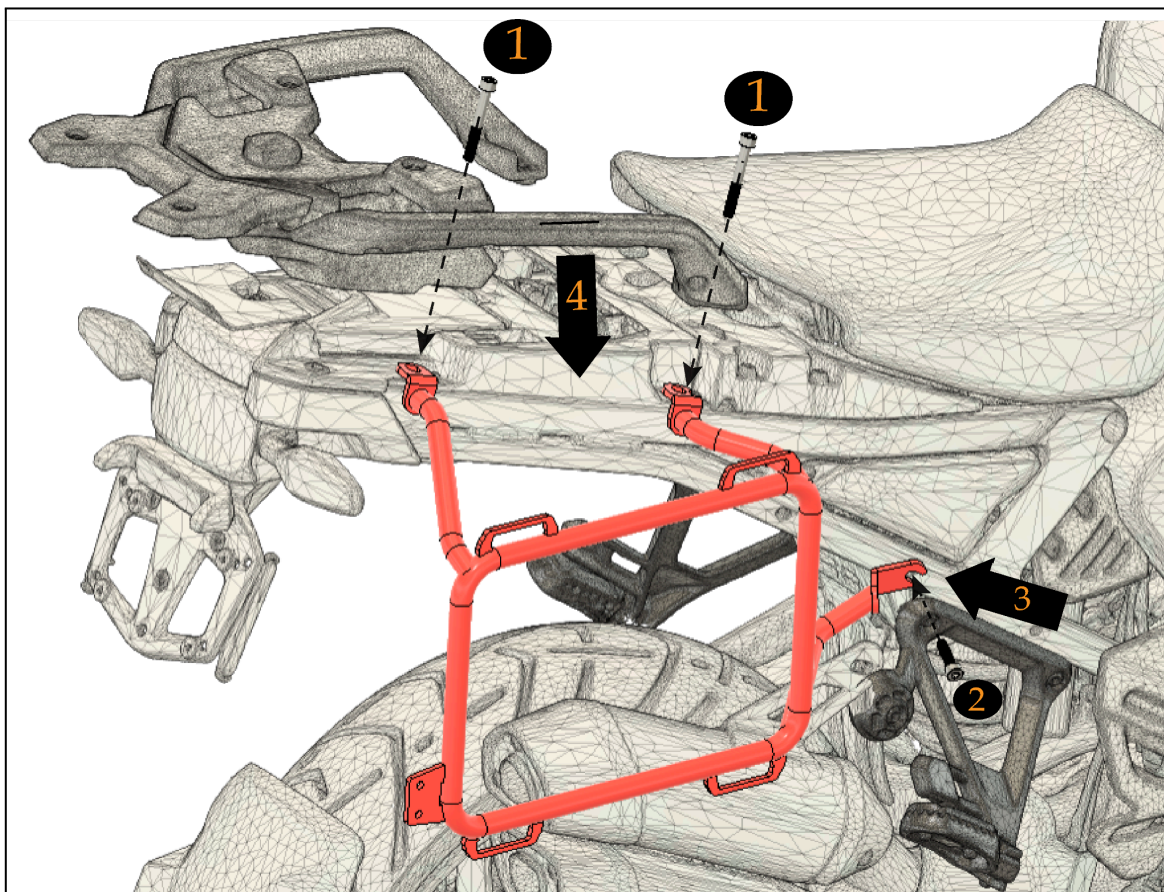



**STEP 3: (Identical Left + Right)**

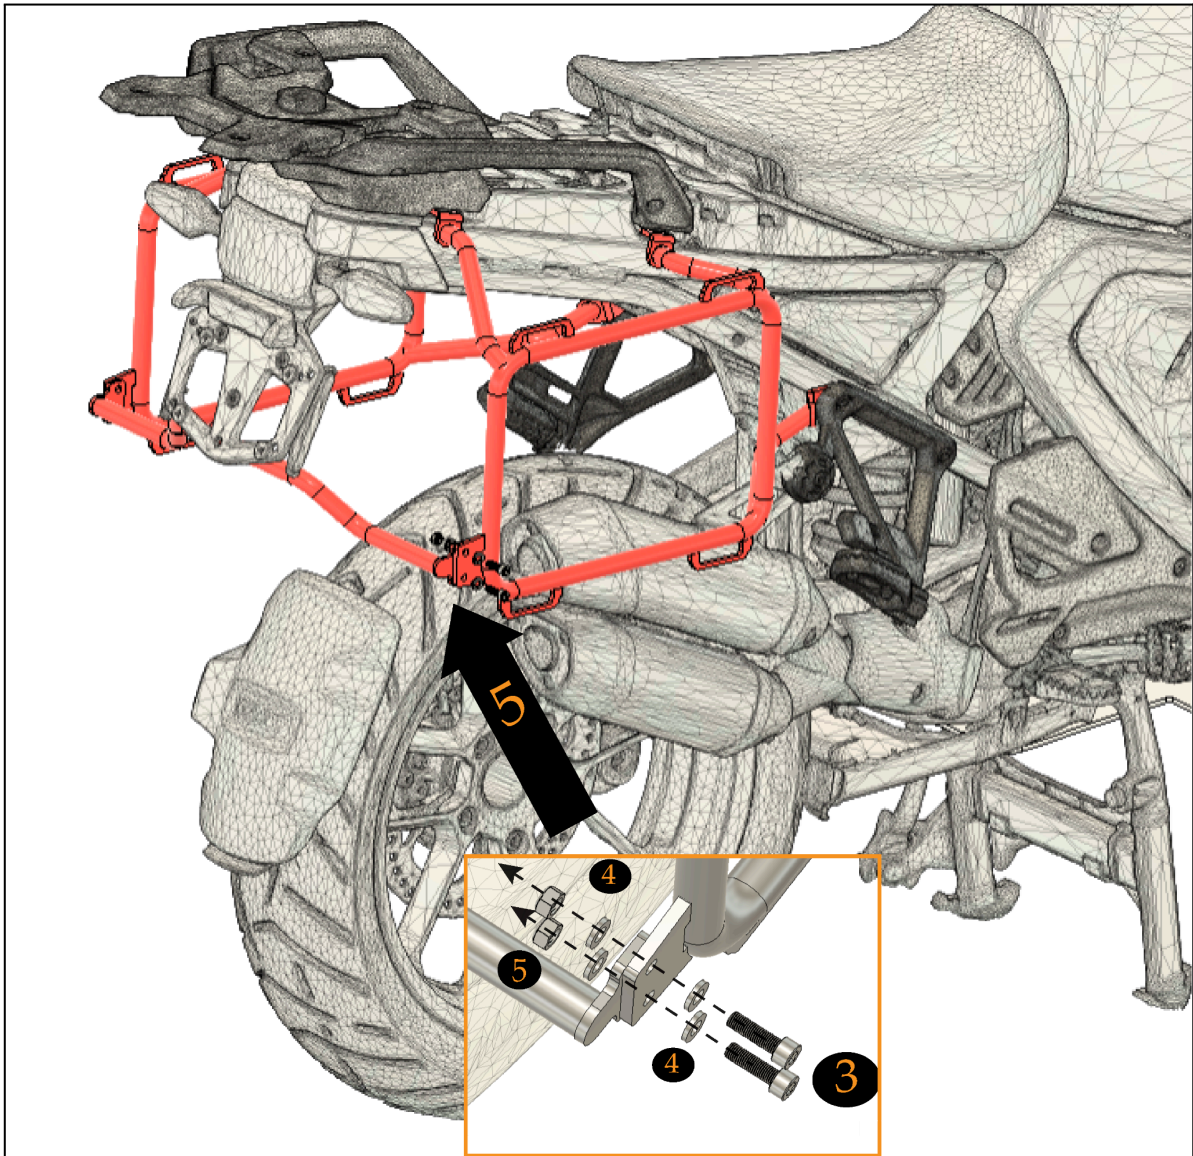

\* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.\*