



COLTÉÉFACÉÉ
SKIDDOO

Kove 800 X

ASSEMBLY GUIDE | **GPS MOUNT**


Tools Required

- Ratchet + Extension
- 4mm Allen Socket
- 5mm Allen Socket
- Blue Loctite (recommended)


Number	QTY	Specifications	Torque (NM)
<u>1</u>	4	OEM M5 Bolt	6
<u>2</u>	2	M6 x 35mm Tapered Allen Bolt	*
<u>3</u>	2	M6 x 30mm Tapered Allen Bolt	*
<u>4</u>	2	M6 x 20mm Allen Bolt	10
<u>5</u>	2	M6 Washer	-
<u>6</u>	2	12.50mm Spacer	-
<u>7</u>	2	15mm Spacer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*

STEP 1 (Windshield Removal) :

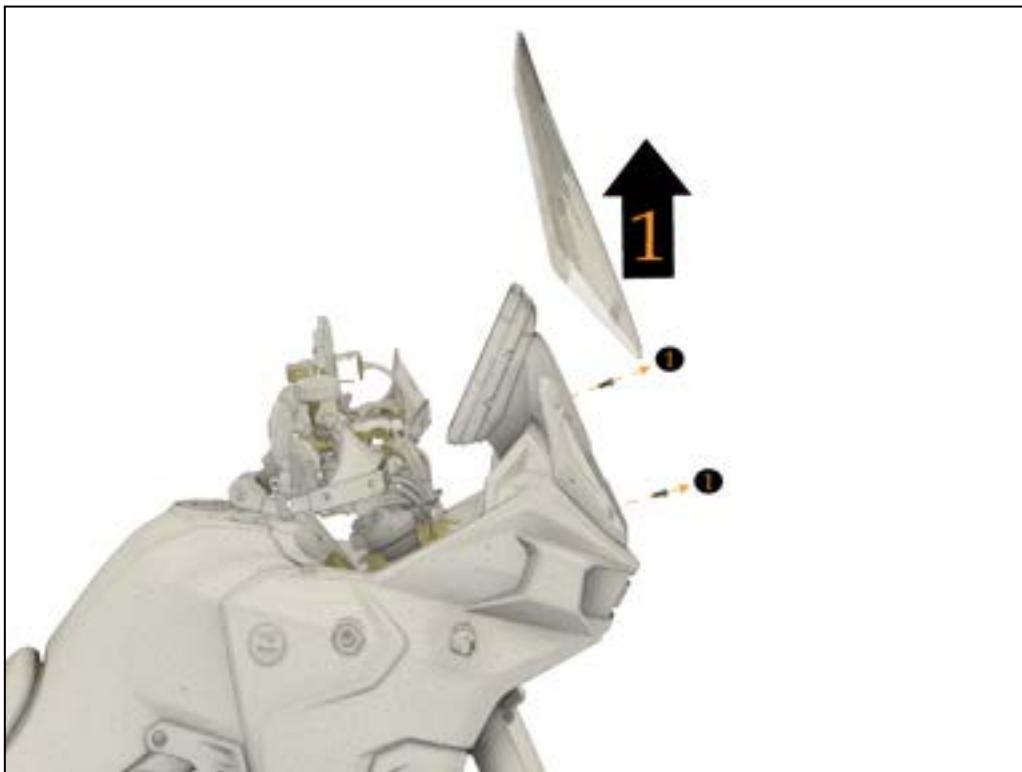


STEP 2 (Spacer Installation) :

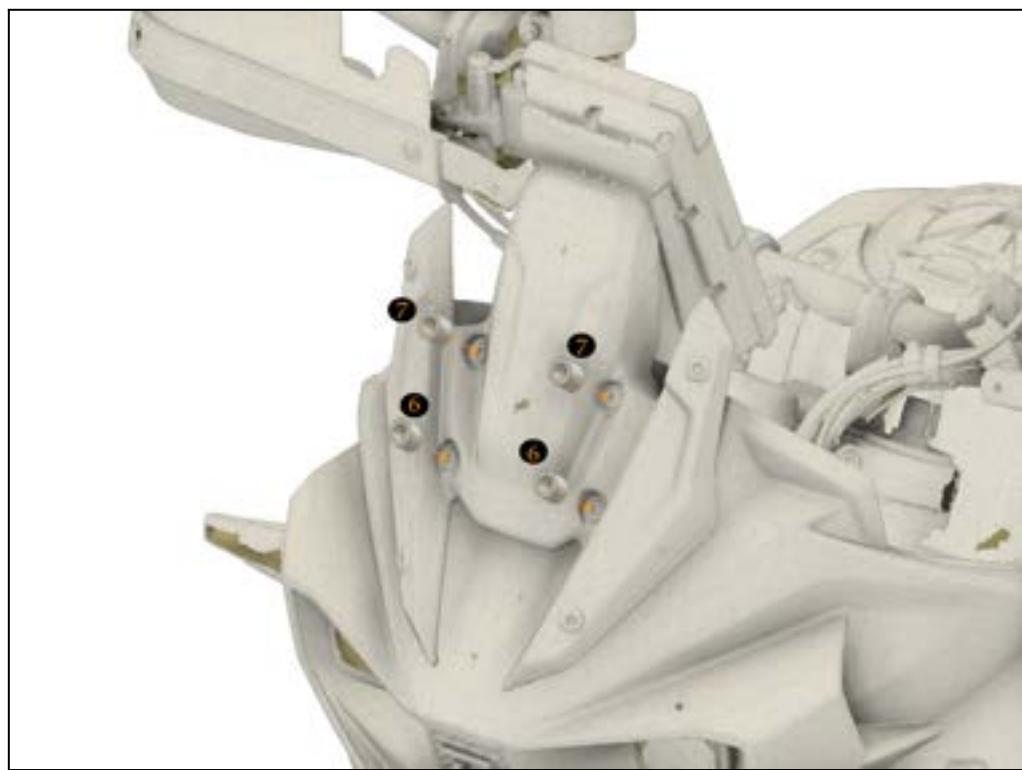


* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS. *

STEP 3 (L + R Arm Install) :

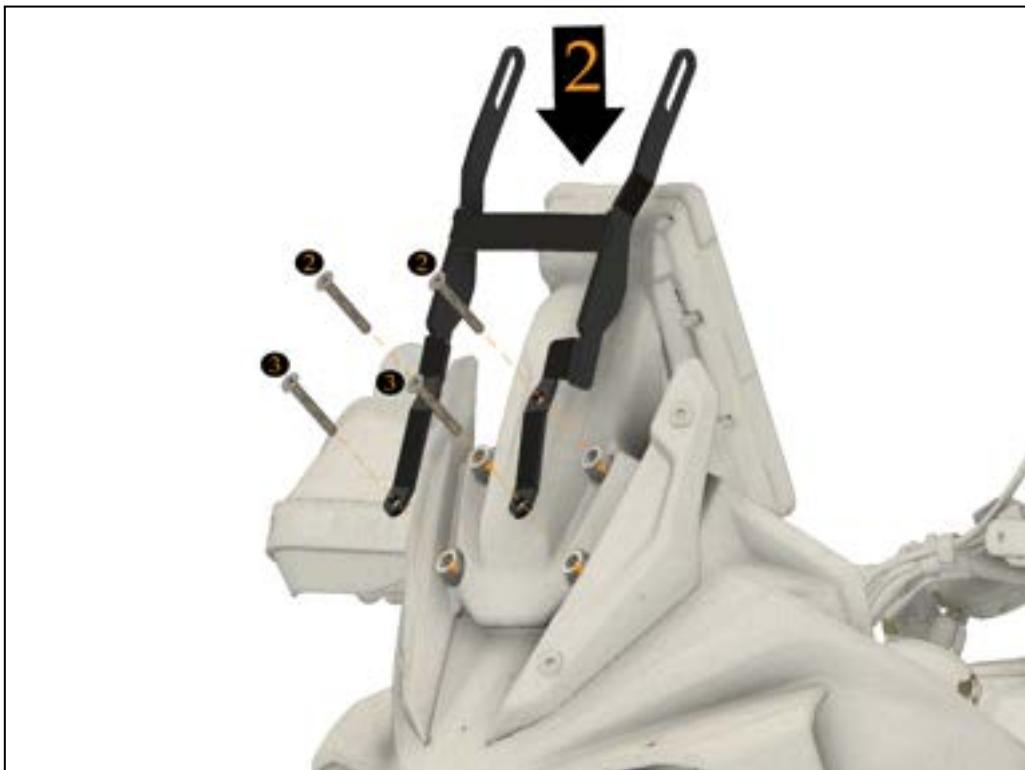

STEP 4 (Cross Brace Install) :

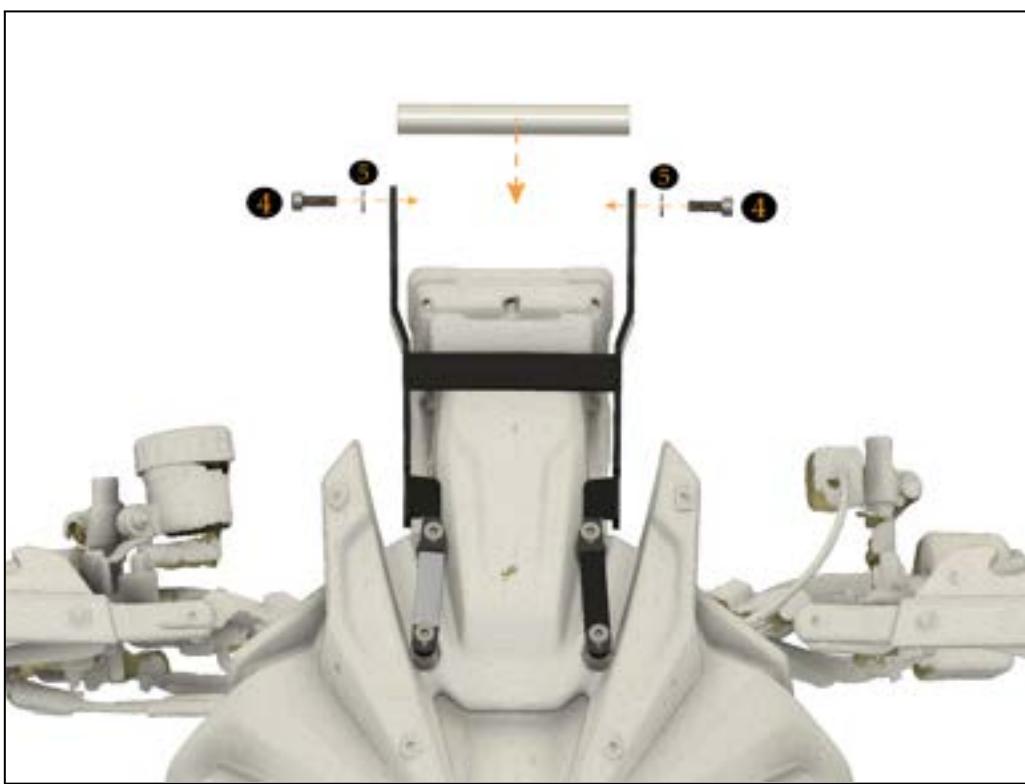

* Torque Disclaimer *

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.